ULTRADESK®

FRAG

V3

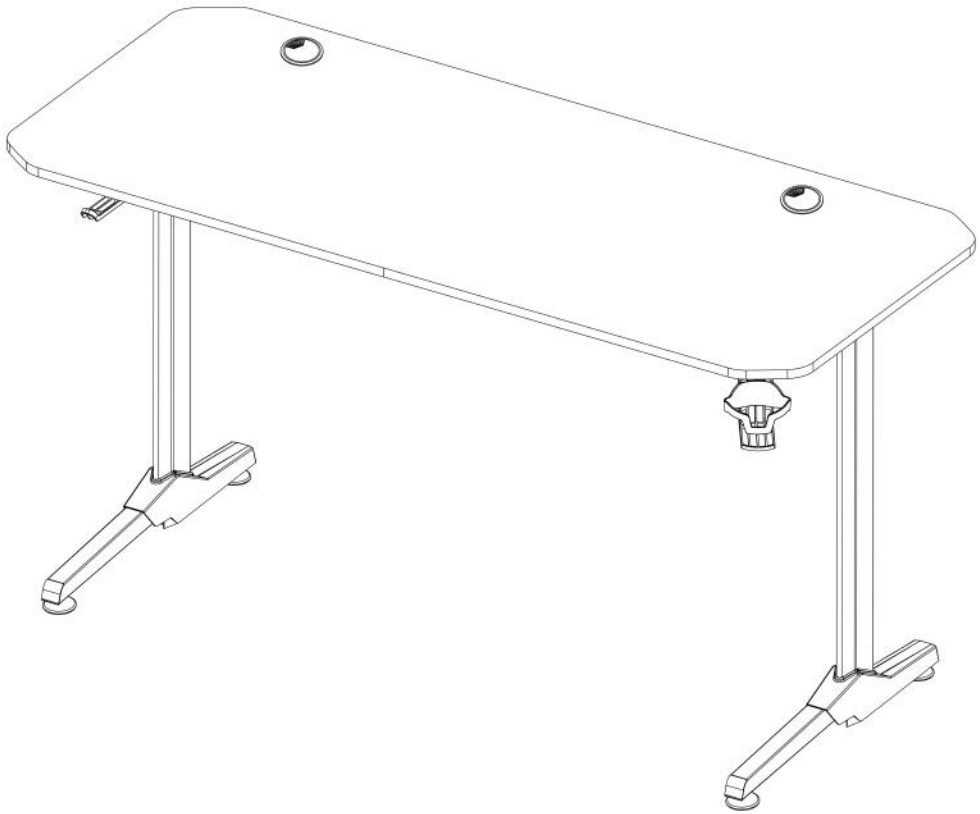

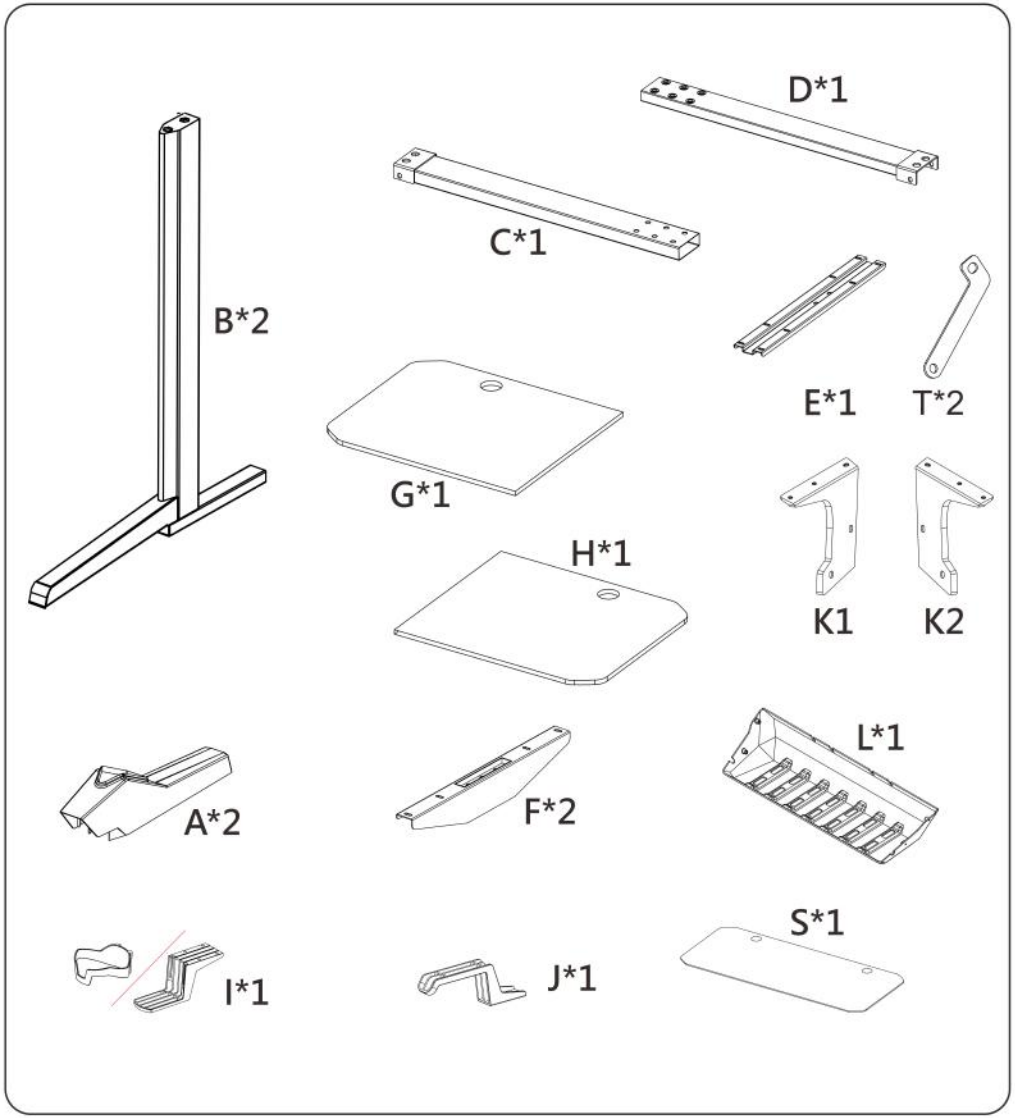

1

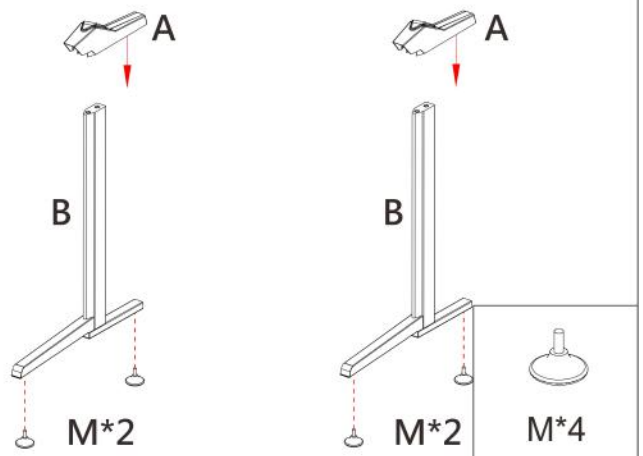

2

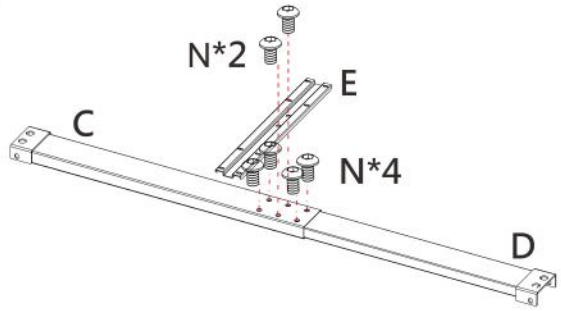

⚠ Please make sure E part is perpendicular to C-D part.

N*6

3

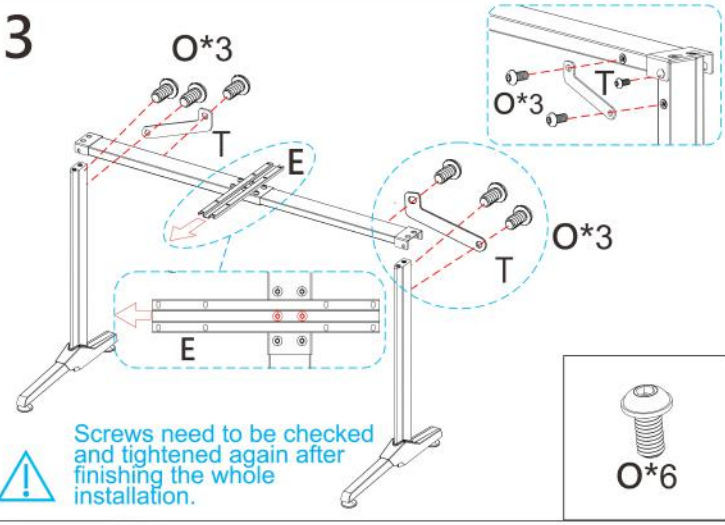

⚠ Screws need to be checked and tightened again after finishing the whole installation.

O*6

4

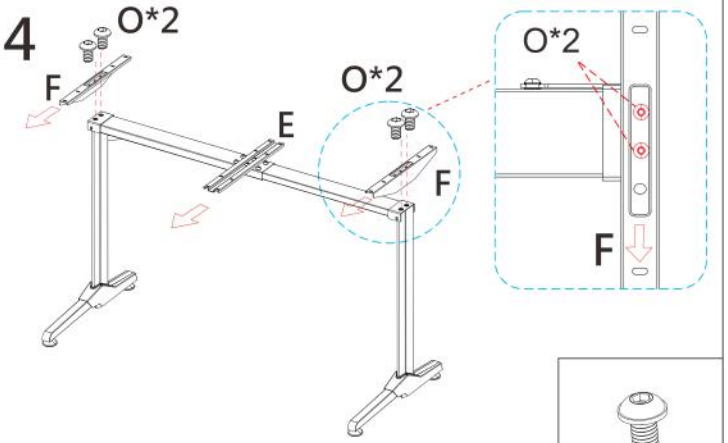

⚠ Screws need to be checked and tightened again after finishing the whole installation.

O*4

5

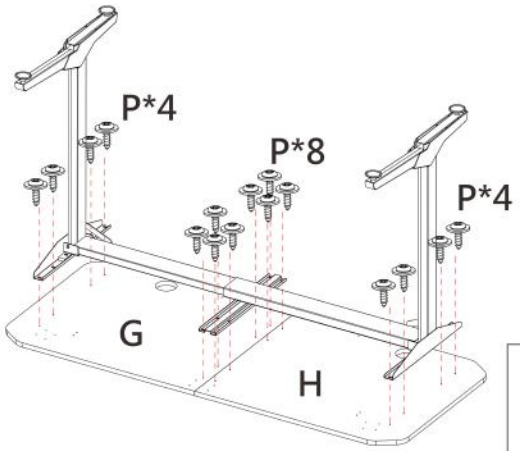

P*16

6

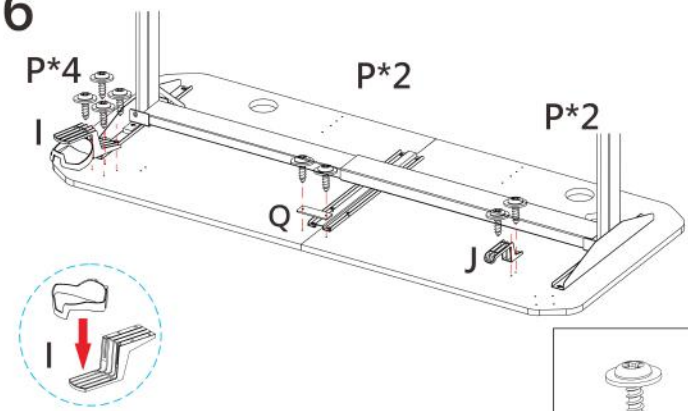

P*8

7

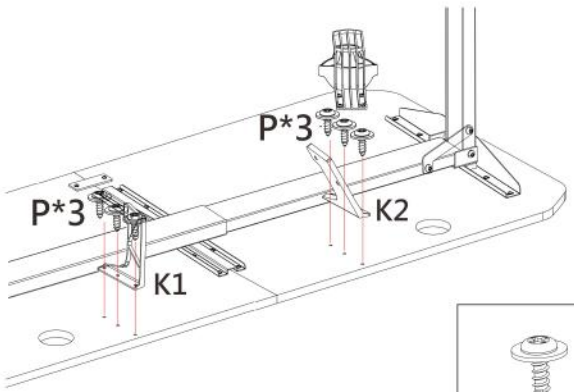

P*6

8

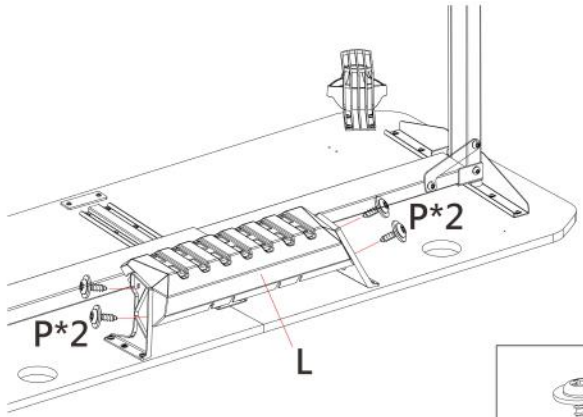

P*4

9

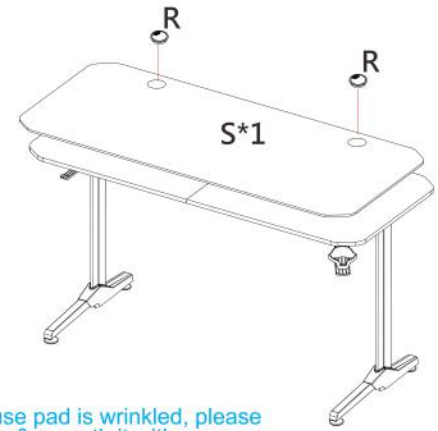

If the mouse pad is wrinkled, please turn it over & smooth it with pressure.